

WAKA WAKA

share the sur

WAKA-WAKA.COM

WAKA WAKA WORLD CHARGER MANUAL

HOW TO USE THE WORLD CHARGER WITH PLUG-PINS

- Only one plug-type can be selected by sliding the button. Other plug-pins are locked automatically.
- You can use the plug pin and the USB ports at the same time.

United Kindom

Depress the button and slide to the left for UK plug compatibility. Pull the insulated ground pin out of the housing.



United States / Australia

Depress the button and slide to the right for US or AUST plug compatibility.

 
Make sure the contact blades are turned to the parallel position.



 
Europe

Depress the button with slide to the central position for EU plug compatibility.









LED power indicator

When the World Charger is plugged into a wall socket the blue indicator light illuminates.

FEATURES

- AC Power Rating 6A max, 250V AC (600W max at 100V, 1,500W max at 250V)
- USB power ratingDC
- 2.1A, 5V DC (10W) 1 x 2.1A / 1 x 1A
- Single plug safety feature
- Built-in safety shutters
- LED power indicator
- Built-in 6A fuse
- Patents protected
- Connectors United Kingdom / USA/Australia / Europe
- Weight

105 grams

Dimensions

55 x 60 x 46 mm

CAUTION

- This product may not work with certain high power appliances such as hair dryers. Check your appliance label to see if it requires less than 6A.
- Each country has its own regulations regarding the use of travel adapters. Please check in each country before use.
- No grounding.
- This product is for use with unearthed or double insulated appliances only.
- Indoor use only.
- Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority for recycling advice.

FOLLOW US













SUPPORT & CONTACT



For any questions, returns and/or support check out our FAQ page waka-waka.com/faq/or send us an email support@waka-waka.com

WARRANTY

1. Limited warranty:

WakaWaka warrants to the original purchaser that this WakaWaka product will be free from defects in workmanship and material under normal consumer use during the applicable warranty period identified in Paragraph 2, below, subject to the exclusions set forth in Paragraph 4, below. This warranty statement sets forth WakaWaka's total and exclusive warranty obligation. We will not assume, nor authorize any person to assume for us, any other liability in connection with the sales of our products.

2. Warranty period:

The warranty period for the WakaWaka product is 2 years. The warranty period starts on the purchase date by the original purchaser. The sales receipt from

this purchase, or other reasonable documentary proof, is required in order to establish the start date of the warranty period.

3. Remedy:

WakaWaka will repair or replace (at WakaWaka's option and expense) any WakaWaka product that fails to operate during the applicable warranty period due to a defect in workmanship or material.

4. Exclusions:

WakaWaka's warranty does not apply to any product that is misused, abused, modified, damaged by accident, or used for anything other than normal consumer use as authorized in WakaWaka's then-current product literature.