





WAKA WAKA POWER 10 MANUAL

RECHARGEABLE POWERBANK

WAKA-WAKA.COM

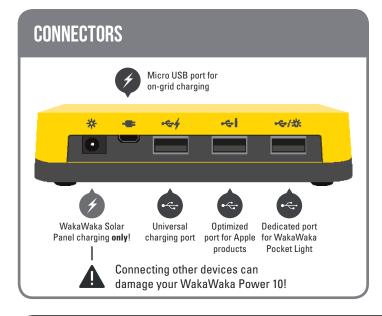

CHARGING EXTERNAL DEVICE

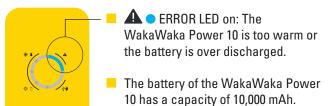

Use a WakaWaka micro-USB or a WakaWaka Lightning charging cable to charge your device.

External devices with a larger battery capacity cannot be fully charged.

MICRO USB CHARGING LED INDICATORS & BATTERY STATUS



0-25% full



25-50% full



50-75% full



75-100% full



100% full



Blinking: temperature out of range for solar charging (0-50 degrees C°)

Use a micro-USB charging cable to charge the WakaWaka Power 10 via the grid. For best results use a WakaWaka micro-USB cable and the 2.1A USB-port at a WakaWaka World Charger. If your WakaWaka has been stored for a longer time it can go into hibernation. Charge the WakaWaka via the grid or put it in the sun to wake it up and give it a powerboost. The battery status indicator lights turn off when the WakaWaka Power 10 is fully charged.

WAKA WAKA SOLAR PANEL CHARGING I FD INDICATORS

Solar indicator lights, if used with WakaWaka Solar Panel & Link.



Slow charge



Normal charge



Fast charge



Maximum charge

USE THE WAKA WAKA POCKET LIGHT WITH YOUR WAKA WAKA POWER 10

SPECIAL FEATURES












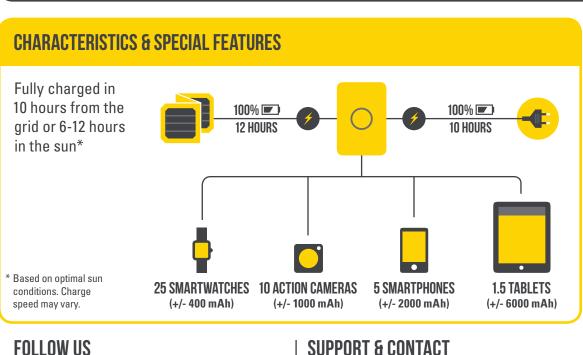

DO NOT SUBMERGE DON'T DROP

FOLLOW US















For any questions, returns and/or support check out our FAQ page waka-waka.com/faq/ or send us an email support@waka-waka.com

WARRANTY

1. Limited warranty:

WakaWaka warrants to the original purchaser that this WakaWaka product will be free from defects in workmanship and material under normal consumer use during the applicable warranty period identified in Paragraph 2, below, subject to the exclusions set forth in Paragraph 4, below. This warranty statement sets forth WakaWaka's total and exclusive warranty obligation. We will not assume, nor authorize any person to assume for us, any other liability in connection with the sales of our products.

2. Warranty period:

The warranty period for the WakaWaka product is 2 years. The warranty period starts on the purchase date by the original purchaser. The sales receipt from

this purchase, or other reasonable documentary proof, is required in order to establish the start date of the warranty period.

3. Remedy:

WakaWaka will repair or replace (at WakaWaka's option and expense) any WakaWaka product that fails to operate during the applicable warranty period due to a defect in workmanship or material.

4. Exclusions:

WakaWaka's warranty does not apply to any product that is misused, abused, modified, damaged by accident, or used for anything other than normal consumer use as authorized in WakaWaka's then-current product literature.